

# Electrical position indicator for angle seat/process Valve

## P992238

## PRESENTATION:

Some requirements for the correct functioning of the electrical position indicators of the angle seat valve:

- Care must be taken in transportation, stocking and installation of the angle seat valve.
- An adequate periodical maintenance has to be performed by trained and authorized personnel as per the accident prevention regulations; this will ensure a long lasting life of the product.
- Installation and maintenance must always comply with the safety regulations for the installation and operation of electrical systems.
- Operation of the device must always be in accordance with the operating instructions.



Special item-not standard

### **TECHNICAL CHARACTERISTIC:**

#### Operating conditions

Setting range of limit switch Ambient temperature Protection class

#### **Materials**

Housing cover Housing base body Bush Operating spindle

#### **Electrical connection**

Supply voltage M 16 cable gland Cable diameter Recommended cross section of wire

#### Function

Function OPEN/CLOSED

#### Switch


SPDT (Single Pole Double Throw)

#### **Connection diagram**

2 - 20 mm continuous - 20° C to + 60°C IP 65 EN 60529

Polysulfone PSU Polypropylene 30% GF PP Stainless Steel Stainless Steel

230V AC Included 4.5 ... 7 mm 0.75 mm<sup>2</sup>

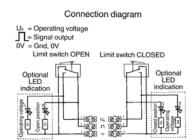

The "ODE " reserves the right to carry out technical and aesthetic modifications without prior notification.